ZEPHIR®

BLENDER

TYPE: ZHC481

MANUALE D'ISTRUZIONI

Instruction

General description

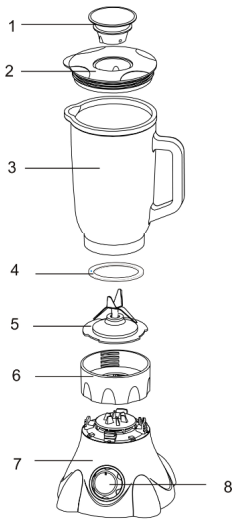

1. Graduated measuring cup
2. Lid
3. Blander jar with level indication
4. Sealing ring
5. Blade unit
6. Blade unit interface
7. Motor unit
8. Control knob

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Noted

Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.

Warning

1. Do not use the appliance if the plug, the supply cord or other parts are damaged. Do not attempt to repair the appliance by yourself, instead of taking it to the service-center to repair.
2. Do not lift the appliance by the handle of the blender jar, when the blender jar is fixed to the motor unit. The motor unit may fall to the floor and get damaged.
3. Never use the blender jar to switch the appliance on and off.
4. Never let the appliance run unattended.
5. Do not touch the blades, especially when the appliances is plugged in the blades are very sharp.
6. Never reach into the blender jar with your fingers or an object while the appliance is running.
7. Make sure the blade unit is securely fastened to the blender jar before you assemble the blender jar onto the motor unit.
8. If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
9. Take precautions when handling sharp blades, particularly when removing the blade from the cup when the cup is emptied and during cleaning;
10. Always disconnect the unit from the when left unattended and before you mount it, disassemble and clean it;
11. The appliance is not intended for, use by children without supervision;
12. Turn off the appliance and unplug it before changing accessories, or before approaching moving parts;
13. Do not place heavy objects on the cables or heat sources close to them . The cables may be damaged;

14. Before carrying out any cleaning or maintenance, disconnect the appliance from the mains by removing the plug;
15. Do not use aerosols sprays (eg . insecticides , hair spray , etc.), it may cause damage to the housing;
16. In case of abnormal situations immediately turn off the power and contact your dealer or service center;
17. Do not use this unit connected to programmers, external timer , remote control system of separate timer or any other device that can switch automatically;
18. Do not use power sockets flying or damaged cables;
19. It is absolutely prohibited to disassemble or repair the unit by the danger of electric shock if necessary contact your dealer or service center;
20. Do not use the appliance near a bathtub, shower, swimming pool;
21. Do not use the machine near flammable objects;
22. Do not insert objects through the slots of the unit;
23. Before connecting to the mains supply, make sure the voltage is correct as reported on the label of the product and that the installation complies with current regulations;
24. Do not touch the power connection with wet hands;
25. Do not use the product for purposes other than those for which it was built;
26. This appliance is not intended for use by persons (including children) with reduced physical, sensory or metal capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
27. If the external flexible cable is damaged it must be replaced by a qualified technician in order to avoid accidents;
28. Children should be supervised to ensure that they do not play with the appliance.
29. Do not touch the cutting edges of the blender blade unit when you clean it. They are very sharp and you could easily cut your fingers on them.

Caution

1. To prevent failure of the appliance, make sure that no food or liquid enters the connection point of the blender jar on the motor unit.
2. Do not exceed the maximum level indicated on the accessories.
3. To prevent spillage, do not put more than 1.0L of liquid in the blender jar, especially when you process at a high speed. Do not put more than 0.8L in the blender jar when you process hot liquids or ingredients that tend to foam.
4. If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
5. Never forget to place the sealing ring on the blade unit before you assemble the blender jar, otherwise leakage will occur.
6. Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.
7. Never fill the blender jar with ingredients hotter than 80℃.
8. Always unplug the appliance before you assemble, disassemble or make adjustments to any of

the parts.

9. Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

Built-in safety lock

This feature ensures that you can only switch on the appliance if you have properly assembled the blender jar on the motor unit. If the blender jar is correctly assembled, the built-in safety lock will be unlocked.

Before first use

Thoroughly clean the parts that will come in contact with food before you use the appliance for the first time (see chapter "Cleaning")

Remove the cable far enough from the bottom rail of the unit to connect the plug to the power outlet.

How to use

The blender is intended for fine pureeing, chopping and blending. With the blender you can prepare soups, sauces, milk shakes and batters. You can also use the blender to process vegetables, fruit and meat.

1. Place the motor unit on the work-surface.
2. Place the sealing ring on the blade unit.
3. Assemble the blade unit onto the blade unit interface.
4. Screw the blade unit interface onto the bottom of the blender jar until it is fixed properly.
5. Place the blender jar with the blade unit interface attached on the motor unit and turn the jar until you hear a "click" (You can place the blender jar on the motor unit in two positions: with the handle pointing to the right or to the left.
6. Put the plug in the wall socket.
7. Once the blender jar is properly locked on the unit, add foods into the blender.
8. Place the lid on the blender jar (Close the lid by pushing it down firmly).
9. Insert the measuring cup into the opening in the lid.
10. Select a speed by turning the control knob (see section "Control knob").
11. When mixing process is over, always switch off the appliance by setting the control knob to "O" before you open the lid.

Control knob

You can set the control knob to any speed between **"0"** or **"1"** or **"2"** and **"P"**

"0"--- Stop speed

"1"--- Highest speed

"2"--- Lowest speed

"P"--- Pulse function

Noted: *Do not let the appliance run for more than 3 minutes at a time. If you have not finished processing after 3 minutes, switch off the appliance and let it cool down to room temperature before you let it run again (more than 1 minutes).*

Tips

1. *Cut meat or solid ingredients into smaller pieces before putting them in the blender jar.*
2. *Do not process a large quantity of solid ingredients at the same time. Process these ingredients in a series of small batches instead.*
3. *To make tomato juice, cut the tomatoes in four and drop the pieces through the opening in the rotating blades.*

After using

1. Unplug the appliance
2. Remove the lid with the measuring cup from the blender jar.
3. Remove the blender jar with the unit interface attached from the motor unit.
4. Unscrew the blade unit interface from the bottom of the blander jar.
5. Always clean the removable parts immediately after use.

Cleaning

We advise you to clean the removable parts immediately after use.

Noted: *Avoid touching the blades. The blades are very sharp. All parts except the motor unit are dishwasher proof. Do not rinse the motor unit the tap. Do not use abrasive cleaning agents, scourers, alcohol etc. to clean the motor unit.*

1. Unplug the appliance.
2. Disassemble all removable parts before cleaning them. Do not forget to remove the sealing ring from the blade unit.
3. Clean all removable parts in the dishwasher or in warm water with some washing-up liquid.
4. Clean the motor unit with a damp cloth.

Italiano

Trattamento del dispositivo elettrico od elettronico a fine vita (Applicabile in tutti i paesi dell'Unione Europea e in quelli con sistema di raccolta differenziata)

Questo simbolo sul prodotto o sulla confezione indica che il prodotto non deve essere considerato come un normale rifiuto domestico, ma deve invece essere consegnato ad un punto di raccolta appropriato per il riciclo di apparecchi elettrici ed elettronici. Assicurandovi che questo prodotto sia smaltito correttamente, voi contribuirete a prevenire potenziali conseguenze negative per l'ambiente e per la salute che potrebbero altrimenti essere causate dal suo smaltimento inadeguato. Il riciclaggio dei materiali aiuta a conservare le risorse naturali. Per informazioni più dettagliate circa il riciclaggio di questo prodotto, potete contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti oppure il negozio dove l'avete acquistato.

Chiunque abbandona o cestina questo apparecchio e non lo riporta in un centro di raccolta differenziata per rifiuti elettrici-elettronici è punito con la sanzione amministrativa pecuniaria prevista dalla normativa vigente in materia di smaltimento abusivo di rifiuti.

English

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or in its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Français

Traitement des appareils électriques et électroniques en fin de vie (Applicable dans les pays de l'Union Européenne et aux autres pays européens disposant de systèmes de collecte sélective)

Ce symbole, apposé sur le produit ou sur son emballage, indique que ce produit ne doit pas être traité avec les déchets ménagers. Il doit être remis à un point de collecte approprié pour le recyclage des équipements électriques et électroniques. En s'assurant que ce produit est bien mis au rebus de manière appropriée, vous aiderez à prévenir les conséquences négatives potentielles pour l'environnement et la santé humaine. Le recyclage des matériaux aidera à conserver les ressources naturelles. Pour toute information supplémentaire au sujet du recyclage de ce produit, vous pouvez contacter votre municipalité, votre déchetterie ou le magasin où vous avez achetez le produit.

Español

Tratamiento de los equipos eléctricos y electónnicos al final de su vida útil (Aplicable en la Unión Europea y en paises europeos con sistemas de recogida selectiva de residuos)

Este símbolo en su equipo o su embalaje indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que deben entregarse en el correspondiente punto de recogida de equipos eléctricos y electrónicos. Asegurándose de que este producto es desechado correctamente, Ud. Está ayudando a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación de este producto. El reciclaje de materiales ayuda a conservar las reservas naturales. Para recibir información detallada sobre el reciclaje de este producto, por favor, contacte con su ayuntamiento, su punto de recogida más cercano o el distribuidor donde adquirió el producto.

Deutsch

Entsorgung von gebrauchten elektrischen und elektronischen Geräten (Anzuwenden in den Ländern der Europäischen Union und anderen europäischen Ländern mit einem separaten Sammelsystem für diese Geräte)

Das Symbol auf dem Produkt oder seiner Verpackung weist darauf hin, dass dieses Produkt nicht als normaler Haushaltsabfall zu behandeln ist, sondern an einer Annahmestelle für das Recycling von elektrischen und elektronischen Geräten abgegeben werden muss. Durch Ihren Beitrag zum korrekten Entsorgen dieses Produkts schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen. Umwelt und Gesundheit werden durch falsches Entsorgen gefährdet. Materialrecycling hilft den Verbrauch von Rohstoffen zu verringern. Weitere Informationen über das Recycling dieses Produkts erhalten Sie von Ihrer Gemeinde, den Kommunalen Entsorgungsbetrieben oder dem Geschäft, in dem Sie das Produkt gekauft haben.

Imported by Westim S.p.A.
Via Roberto Bracco 42/E, 00137 Rome,Italy
Phone: +39 06 8720311
Mail: info@westim.it

Made in China